




RADIO PROGRAMMING


This procedure lets you programme compatible multifunctional or generic transmitters.

WHICH REMOTE CONTROL DO YOU WANT TO ASSOCIATE WITH THE CONTROL UNIT?


MULTIFUNCTIONAL TRANSMITTERS - MODELS AND CODES

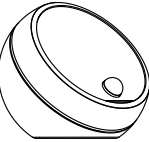

**CODE:**  
HB70-1L

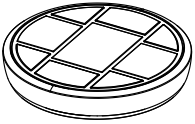

**CODE:**  
HB80-30D,  
HB80-2L  
HB80-4L,  
HB80-4RGBW,  
HB80-30RGBW

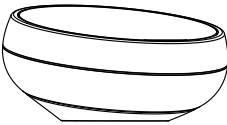

**CODE:**  
HB90-6LT  
HB90-6DM  
HB90-8P



**CODE:**  
TOUCH-1L  
TOUCH-1  
TOUCH-1DIM  
TOUCH-4L

With multifunctional transmitters the transmitter control modes depend on the model used. Refer to the transmitter manual, to the paragraph entitled "commands sent by the transmitter", bearing in mind that it is an "RGBW" device.

GENERIC TRANSMITTERS - MODELS AND CODES



**CODE:**  
HB70-5G



**CODE:**  
HB80-6G



**CODE:**  
MCU-TX4



**CODE:**  
TOUCH-1G  
TOUCH-2G  
TOUCH-4G

With generic transmitters, the transmitter's control modes depend on the function associated with the key during the association procedure. The available function for the key are:


TABLE 4.1 - KEY FUNCTIONS OF THE GENERIC TRANSMITTER

NUMBER TO BE SET IN "STEP 3b" OF THE PROCEDURE	KEY FUNCTION
1	Function of pre-assigned key (see transmitter manual)
2	ON/OFF
3	ON
4	OFF
5	Dimmer UP
6	Dimmer DOWN
7	Short press: ON/OFF Prolonged press: Dimmer intensity UP/ DOWN
8	Short press: ON Prolonged press: Dimmer intensity UP
9	Short press: OFF Prolonged press: Dimmer intensity DOWN
0	"Soft Off 1 hr": gradual fading in one hour (see paragraph 5.1)

PROCEDURE

STEP 1

Short presses on the "SET" key let you scroll through the menu until "P1" programming appears on the display.

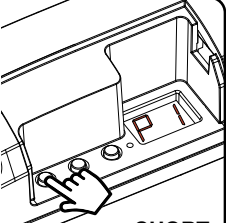


SHORT PRESSURE

STEP 2

A prolonged press on the "SET" key (approx. 3 seconds) takes you into programming.

The LED on the receiver comes on

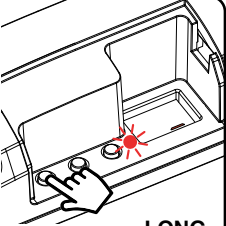

LONG PRESSURE


WHICH TRANSMITTER DO YOU WANT TO PROGRAMME?

MULTIFUNCTION TRANSMITTER  
(see models and codes on previous page)

GENERIC TRANSMITTER  
(see models and codes on previous page)

STEP 3a


Short presses on key "B" let you set value "1" on the display

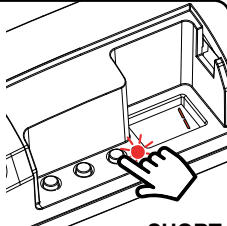

SHORT PRESSURE

STEP 3b

Short presses on key "B" let you choose the function you want to programme shown on the displays. See table 4.1 on the previous page.

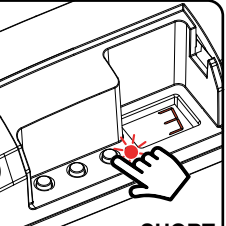


SHORT PRESSURE

STEP 4

Give a long press on key "B" (approx. 3 seconds).

The LED on the display comes on

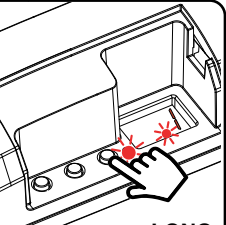


LONG PRESSURE


STEP 5

Make a transmission with the transmitter to be saved (see transmitter manual, the paragraph entitled "transmitter programming").

The LED on the receiver flashes 3 times to signal that it has been received.

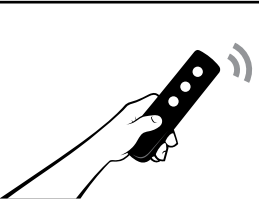

MAKE A TRANSMISSION WITH THE TRANSMITTER

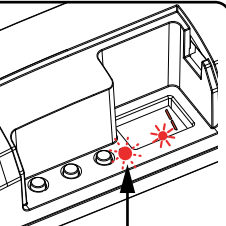


THE LED FLASHES 3 TIMES

STEP 6

The control unit listens for 50 seconds in case you want to add other transmitters. To immediately exit the procedure give a short pressure on key "b".

The LED on the display turns off

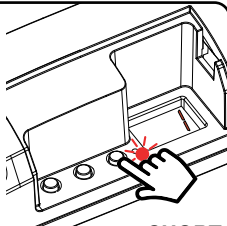

SHORT PRESSURE

STEP 7

The control unit goes back to the menu displaying the radio programming. If you want to save other transmitters, go back to point 3 of this procedure.

If you want to go back to the menu displaying the different types of programming, give a prolonged press to the "SET" key (approx. 3 seconds).